

## **1993 FD3S Touring Trim Electrical FSM Index/Supplement**

### **Purpose:**

This is simply a searchable index of connectors that are found in the various 1993 FD3S wiring harnesses. Each entry shows the purpose of the connector, what harness it is located in, and what page(s) of the FSM reference it.


### **Scope:**

This index is customized for my 1993 FD3S RX7 with touring trim. It has a manual transmission, Bose sound system, cruise control, fog lights, and rear washer + wiper. If your RX7 has different options you will have to reference the full FSM for your particular needs.

The harnesses circled in blue are covered in this index:

## Harness symbols

DESCRIPTION OF HARNESS	COLOR	SYMBOL	DESCRIPTION OF HARNESS	SYMBOL
FRONT HARNESS		(F)	REAR HARNESS	(R)
ENGINE HARNESS		(E)	REAR NO.2 HARNESS	(R2)
DASH HARNESS		(D)	REAR NO.3 HARNESS	(R3)
INSTRUMENT PANEL HARNESS		(I)	FLOOR HARNESS	(FR)
EMISSION HARNESS		(EM)	DOOR NO.1 HARNESS	(DR1)
A/C HARNESS		(AC)	DOOR NO.2 HARNESS	(DR2)
INTERIOR LIGHT HARNESS		(IN)	AIR BAG HARNESS	(AB)

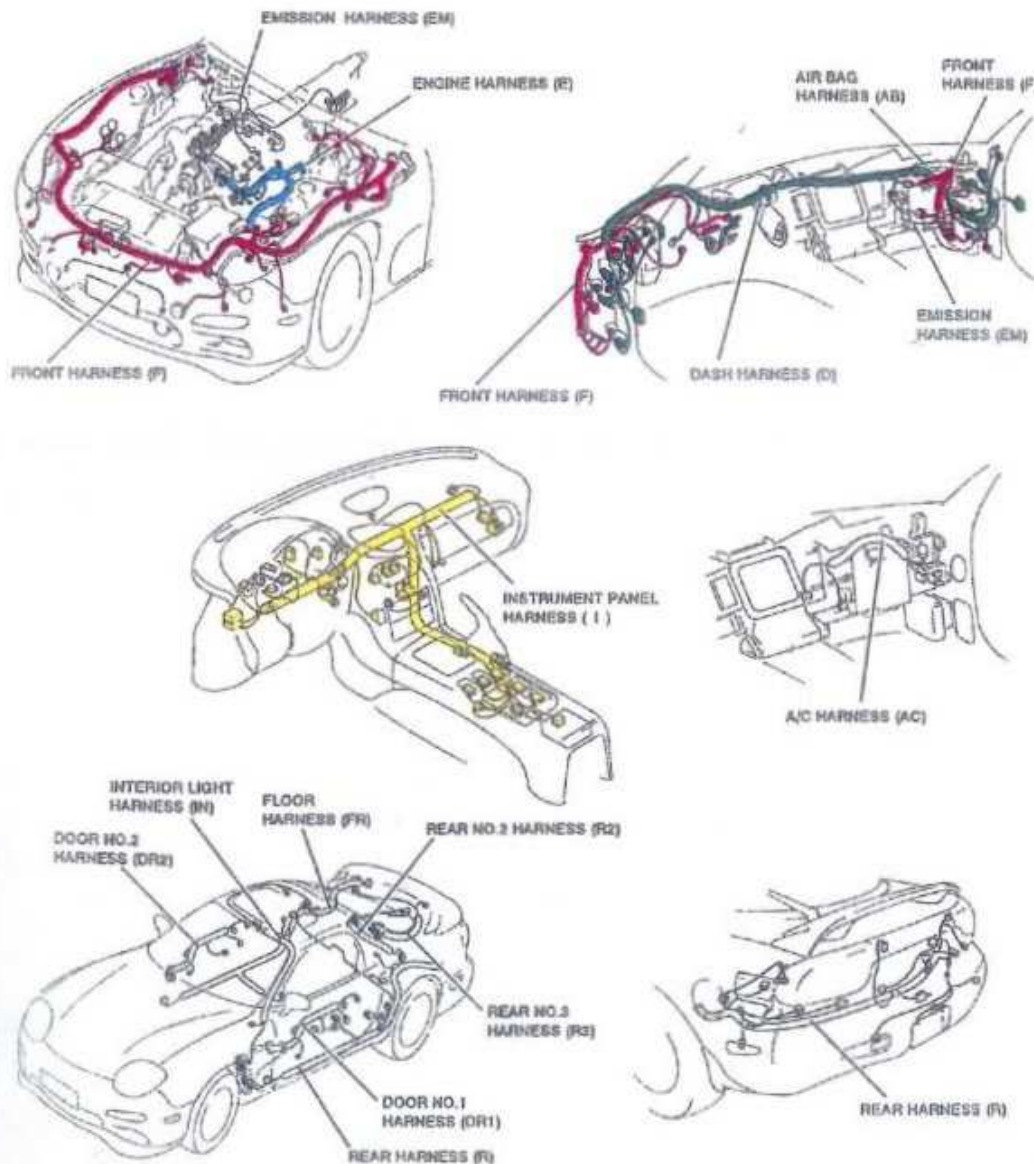

The emissions and engine harness are **not** covered in this index simply because I am swapping in a LS1 into my RX7 and don't actually have the harnesses to reference.

**Disclaimer:**

I am only human, so there are bound to be errors / oversights in my work. This is particularly possible in the page references to the connector. I created the page references by scanning through the FSM once. It is possible that I missed references. What this means for you is that if you are modifying a particular connectors and cannot account for every wire in the page references provided by me, then YOU must do the work and dig through the FSM to find where the other connectors are referenced to be safe.

**Misc. / Tips:**


The list is in alphabetical order, but this PDF is also searchable, so using CTRL+F to use the search dialog will save you time.

### WIRING COLOR CODE

Color	Code	Color	Code
Blue	L	Natural	N
Black	B	Orange	O
Brown	BR	Pink	P
Dark Blue	DL	Red	R
Dark Green	DG	Purple	PU
Green	G	Tan	T
Gray	GY	White	W
Light Blue	LB	Yellow	Y
Light Green	LG	Violet	V


A2-03 – Starter Cut Relay (F) Page 24

A1-03 STARTER CUT RELAY  
(F)

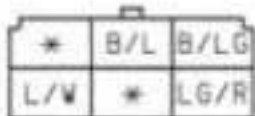

A2-04 – Starter Cut Interlock (F) Page 24

 -04 STARTER INTERLOCK  
SWITCH (F)



B1-01 – ECU (F) Page 28, 30, 32, 34

B1-01 ECU (F)


1U	1S	1Q	1O	1M	1K	1I	1G	1E	1C	1A
L	G	L/O (B/O)	G/Y	G/R	L/W	LG/Y	BR	V	B/R	L/R
*	L/B	O/W (Y)	*	L/Y	Y/B	BR/B	LG	W/B	W/R	B/W
1V	1T	1R	1P	1N	1L	1J	1H	1F	1D	1B

( )...EC-AT, ( )...CANADA

2K	2I	2G	2E	2C	2A
V/W (W/R)	O/L	* (LG/R)	* (O/B)	* (L)	*
W/G	GY	*	* (B)	* (Y/G)	Y/L
2L	2J	2H	2F	2D	2B


B1-02 – EGI Main Relay (F) Page 28

 B1-02 EGI MAIN RELAY (F)




B1-03 – Circuit Opening Relay (F) Page 28

 -03 CIRCUIT OPENING RELAY (F)

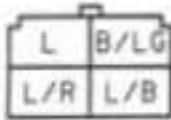

B1-04 – Fuel Pump Relay (F) Page 28

 B1-04 FUEL PUMP RELAY (F)




B1-05 – Fuel Pump Resistor (F) Page 28

B1-05 FUEL PUMP RESISTOR (F)




B1-08 – Air Pump Relay (F) Page 28

 B1-08 A/P RELAY (F)



B1-09 – Igniter (F) Page 28

 
B1-09 IGNITER (F)

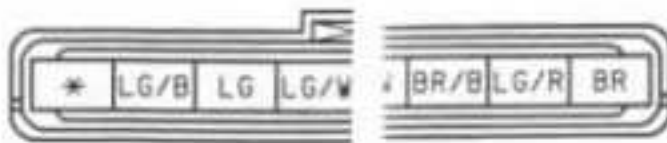


B1-10 – Condenser (F) Page 28  
 B1-10 CONDENSER (F)



 B1-19 – Heat Hazard Sensor (FR) Page 30  
 B1-19 HEAT H D  
 SENSOR I




B1-20 – EL Unit (D) Page 30

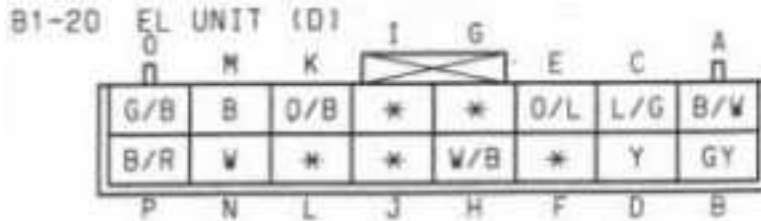 


B1-21 – Power Steering Switch (F) Page 30  
 B1-21 P/S SWITCH (F)



 B1-45 – Pressure Sensor (F) Page 45  
 B1-45 PRESSURE SENSOR  
 (F)

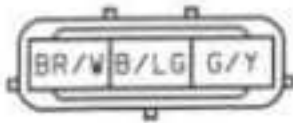


 B1-52 – Clutch Switch (D) Page 34  
 B1-52 CLUTCH SWITCH (D)

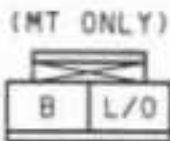


B2-01 – Cooling Fan Relay No 1 (F) Page 42

 B2-01 COOLING FAN RELAY  
NO.1 (F)

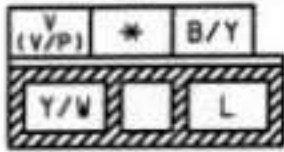


B2-02 – Cooling Fan Relay No 2 (F) Page 42

 B2-02 COOLING FAN RELAY  
NO.2 (F)




B2-03 – Cooling Fan Relay No 3 (F) Page 42

 B2-03 COOLING FAN RELAY  
NO.3 (F)




B2-04 – Cooling Fan Relay No 4 (F) Page 42

 B2-04 COOLING FAN RELAY  
NO.4 (F)




B2-05 – Cooling Fan Motor No 1 (F) Page 42

 B-05 COOLING FAN MOTOR  
NO.1 (F)

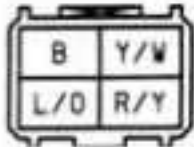

B2-06 – Cooling Fan Motor No 2 (F) Page 42

 B2-06 COOLING FAN MOTOR  
NO.2 (F)

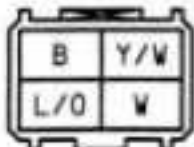

B2-10 – Connector between Front and Emission No 2 (F) Page 42

B2-10 CONNECTOR BETWEEN FRONT(F) & EMISSION NO.2(EM2)



B2-11 – Connector between Front and Emission No 2 (F) Page 42

B2-11: CONNECTOR BETWEEN FRONT(F) & EMISSION NO.2(EM2)



 
B2-12 – Connector between Front and Emission No 2 (F) Page 42

B2-12 CONNECTOR BETWEEN FRONT(F) & EMISSION NO.2(EM2)




C1-01 – Instrument Cluster (I and I2) Page 44, 46, 80

C1-01 INSTRUMENT CLUSTER

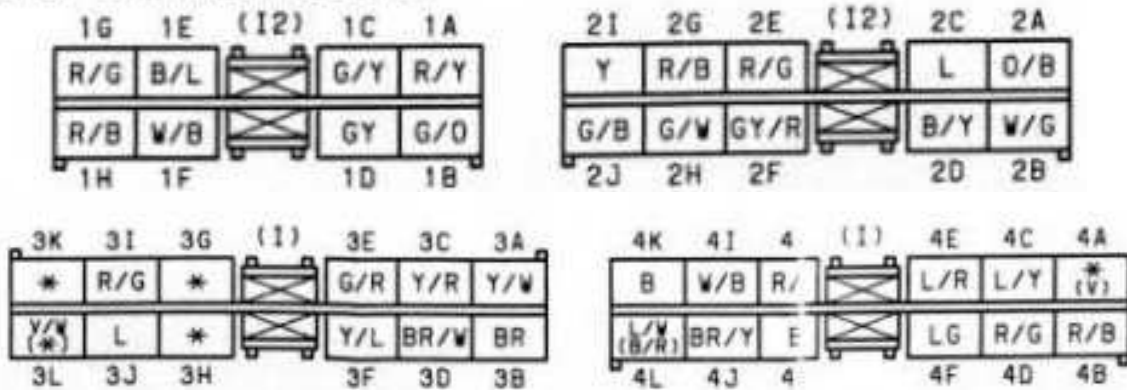

C1-02 – Heat Warning (I) Page 44

 C1-02 HEAT WARNING (I)



C1-10 – Parking Brake Switch (I) Page 46

C1-10 PARKING BRAKE SWITCH (I)



 
C1-11 – Brake Fluid Level Sensor (F) Page 46

C1-11 BRAKE FLUID LEVEL SENSOR (F)



D1-01 – Wiper Motor (F) Page 50/D-1

D1-01 WIPER MOTOR (F)

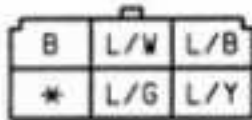


D1-02 – Washer Motor (F) Page 50/D-1

D1-02 WASHER MOTOR (F)



D2-02 – Rear Washer Motor (R) Page 52/D-2

 D2-02 REAR WASHER MOTOR (R)



D3-01 – Washer Motor (R) Page 50/D-1

D3-01 WASHER MOTOR (R)



(WITH HEADLIGHT CLEANER) ① ②

D3-02 – Headlight Cleaner Switch Illumination (I) Page 80

 
D3-02 HEADLIGHT CLEANER SWITCH ILLUMINATION (I)






E1-01 – Retractable Headlight Switch/Illumination (I) Page 56, 80

E1-01 RETRACTABLE  
HEADLIGHT SWITCH (I)




E1-02 - Retractable Headlight Relay – (F) Page 56

 E1-02 RETRACTABLE  
HEADLIGHT RELAY (F)




E1-03 - Retractable Headlight Actuator LH – (F) Page 56

 E1-03 RETRACTABLE  
HEADLIGHT ACTUATOR  
LH (F)

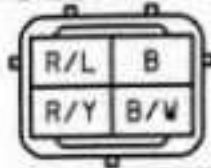


E1-04 - Retractable Headlight Actuator RH – (F) Page 56

 E1-04 RETRACTABLE  
HEADLIGHT ACTUATOR  
RH (F)

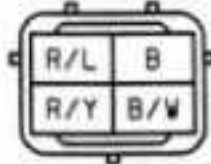


E1-05 – Headlight Relay (F) Page 56

 E -05 HEADLIGHT RELAY (F)




E1-06 – Headlight LH (F) Page 56

 E1-06 HEADLIGHT LH (F)



E1-07 – Headlight RH (F) Page 56

 E1-07 HEADLIGHT RH (F)



E1-08 - Front Fog Light Switch/Illumination (I) Page 56, 80

E1-08 FRONT FOG LIGHT SWITCH (I)



 
E1-11 - Connector between Front and Foglight Harness (F) Page 56

E -11 CONNECTOR BETWEEN FRONT (F) & SHORT HARNESS




E3-01 - TNS Relay (F) Page 60

E3-01 TNS RELAY (F)

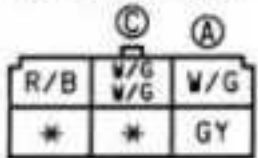

E3-02 - Front Combination Light LH (F) Page 62/F-1

 E3-02 FRONT COMBINATION LIGHT (FRONT TURN LIGHT) LH (F)

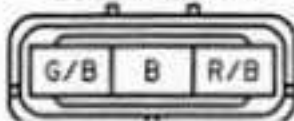


E3-03 - Front Combination Light RH (F) Page 62/F-1

E3-03 FRONT COMBINATION LIGHT (FRONT TURN LIGHT) RH (F)




E3-04 - Front Side Marker Light LH (F) Page 60

 E3-04 FRONT SIDE MARKER LIGHT LH (F)




E3-05 – Front Side Marker Light RH (F) Page 60

 E3-05 FRONT SIDE MARKER  
LIGHT RH (F)




E3-06 – Rear Combination Light LH (R) Page 60, 66

 E3-06 REAR COMBINATION  
LIGHT (TAILLIGHT) LH  
(R)



E3-07 – Rear Combination Light RH (R) Page 60, 66

 E3-07 REAR COMBINATION  
LIGHT (TAILLIGHT) RH  
(R)



E3-08 – Rear Side Marker Light LH (R) Page 60

E3-08 REAR SIDE MARKER  
LIGHT LH (R)



 
E3-09 - Rear Side Marker Light RH (R) Page 60

E3-09 REAR SIDE MARKER  
LIGHT RH (R)




E3-10 – Connector between Rear and Short Harness (R) Page 60, 66

E3-10 CONNECTOR BETWEEN REAR (R) & SHORT HARNESS  
(R)

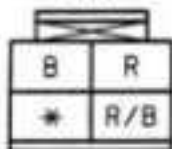

F3-01 – Stoplight Switch (D) Page 66

 F1-01 FLASHER UNIT (F)  
(IN THE CPU NO.2)

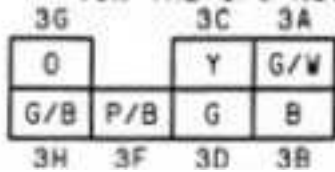


F3-02 – High-Mount Stoplight (R) Page 66

F3-02 HIGH-MOUNT STOPLIGHT  
(R)



F3-03 – Horn Relay (F) Page 66

 F3-03 HORN RELAY (F)

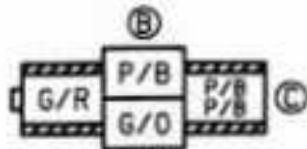

F3-05 – Horn LH (F) Page 66

F3-05 HORN LH (F)



 
 
F3-06 – Horn RH (F) Page 66

F3-06 HORN RH (F)




G-01 – Hazard Warning Switch / Heater Control Unit/Illumination (I) Page 62/F-1, 68,  
80

G-01 HEATER CONTROL UNIT (AMPLIFIER) (I)

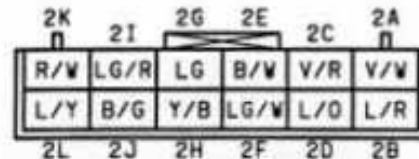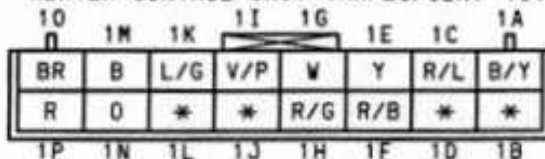


G-02 – Heater Control Unit (Blower Switch) (I) Page 68

 G-02 HEATER CONTROL UNIT  
(BLOWER SWITCH) (I)




G-03 – A/C Relay (F) Page 68

 G-03 A/C RELAY (F)




G-04 – Refrigerant Pressure Switch (F) Page 68

 G-04 REFRIGERANT  
PRESSURE SWITCH (F)

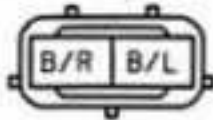


G-12 – Connector between Instrument Panel and AC (I) Page 68

 G-12 CONNECTOR BETWEEN INSTRUMENT PANEL (I) & A/C (AC)




G-13 – Connector between Dash and AC (D) Page 68

 G-13 CONNECTOR BETWEEN DASH (D) & A/C (AC)

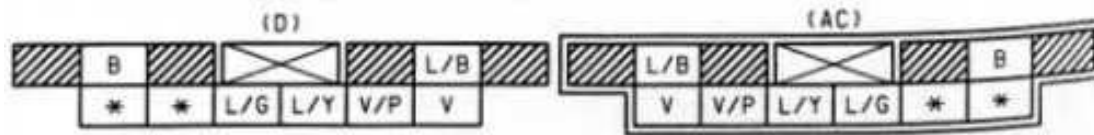


H1-07 – Selector Illumination Lamp (I) Page 80

 H1-07 SHIFT-LOCK CONTROL UNIT (I)

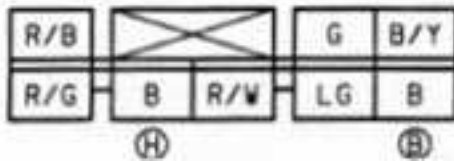


I1-01 – Rear Defroster Relay (R) Page 78/I-1

 I1-01 REAR WINDOW  
DEFROSTER RELAY

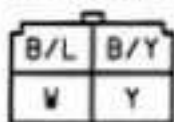


I1-04 – Rear Window Defroster Switch/Illumination (I) Page 78/I-1, 80

 I1-04 REAR WINDOW  
DEFROSTER SWITCH

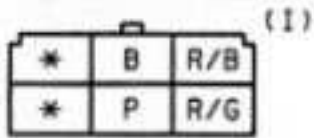

I1-05 – Cigarette Lighter (I) Page 78/I-1

 I1-05 CIGARETTE  
LIGHTER (I)



I2-01 – Panel Lamp Control Switch (I) Page 80

I2-01 PANEL LAMP CONTROL  
SWITCH (I)



 
I2-02 – Cigarette Lighter Illumination (I) Page 80

I2-02 CIGARETTE LIGHTER  
ILLUMINATION (I)



I2-03 – Ash Tray Illumination (I) Page 80

I2-03 ASH-TRAY  
ILLUMINATION (I)



I3-02 – Door Switch LH (R) Page 82

I3-02 DOOR SWITCH LH (R)



 
I3-03 – Door Switch RH (FR) Page 82

I3-03 DOOR SWITCH RH (FR)



I3-04 – Connector between Dash and Interior Lamp (D) Page 82

I3-04 CONNECTOR BETWEEN  
DASH(D) & INTERIOR  
LAMP (IN)



I3-07 – Cargo Compartment Lamp Switch (R) Page 82

I3-07 CARGO COMPARTMENT  
LAMP SWITCH (R)



I3-09 – Gove Box Lamp (I) Page 82

I3-09 GLOVE BOX LAMP (I)



I3-10 – Glove Box Lamp Switch (I) Page 82

I3-10 GLOVE BOX LAMP  
SWITCH (I)



 
J1-01 – Audio Illumination (I) Page 80

J1-01 AUDIO ILLUMINATION (I)  
<J2-01>




J2-01 – Audio Unit (I) Page 86

J2-01 AUDIO UNIT (I)

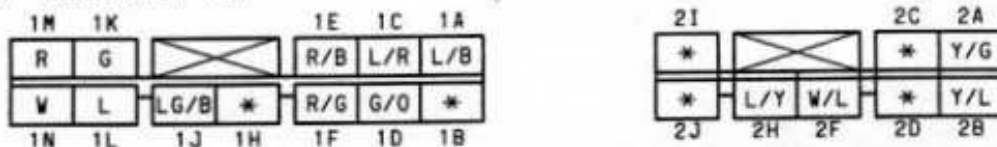


J2-04 – Acoustic Wave Guide Assembly (R) Page 86

 J2-04 ACOUSTIC WAVE  
GUIDE ASSEMBLY (R)

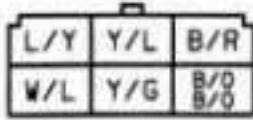

J2-05 – Radio Relay (F) Page 86

 J2-05 RADIO RELAY (F)




J2-06 – Center Speaker Amplifier (I) Page 86

J2-06 CENTER SPEAKER AMPLIFIER (I)



J2-07 – Center Speaker (I) Page 86

 J2-07 CENTER SPEAKER (I)




J3-01 – Power Antenna Assembly (R) Page 88/J-3

J3-01 POWER ANTENNA ASSEMBLY (R)




J4-01 – CPU No 2 (D) Page 90

 J4-01 CPU NO.2 ( )...EC-AT

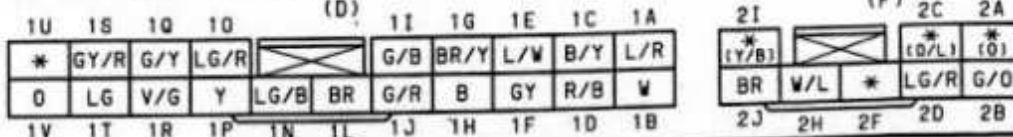

J4-02 – Key Reminder Switch (D) Page 90

 J4-02 KEY INTERLOCK  
SOLENOID (D)

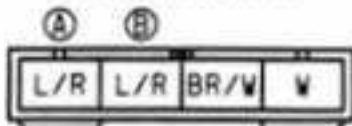


J4-03 – Security Lamp (I) Page 90



03 SECURITY LAMP (I)



 
J4-04 – Options Switch (F) Page 90  
 J4-04 OPTION SWITCH (F)

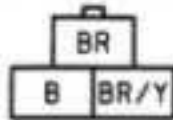

J4-05 – Hood Switch (F) Page 90  
 J4-05 HOOD SWITCH (F)



 J4-07 – Rear Hatch Lock Key Cylinder Switch (R) Page 90  
 J4-07 REAR HATCH LOCK KEY CYLINDER SWITCH (R)




J4-10 – Seat Belt Buckle Switch (R) Page 90

0 SEAT BELT BUCKLE SWITCH (R)



 
JB-02 – Fuse Box for Instrument Panel Harness (I) Page 119  
 JB-02 INSTRUMENT PANEL HARNESS (I)

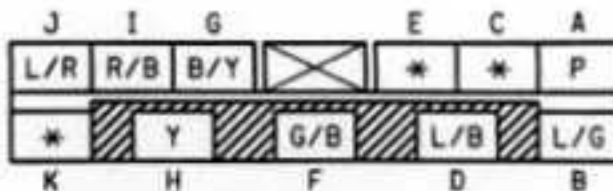

JB-03 – Fuse Box for Rear Harness (R) Page 119


JB-03 REAR HARNESS (R)

 ( )...WITH REAR WIPER & WASHER

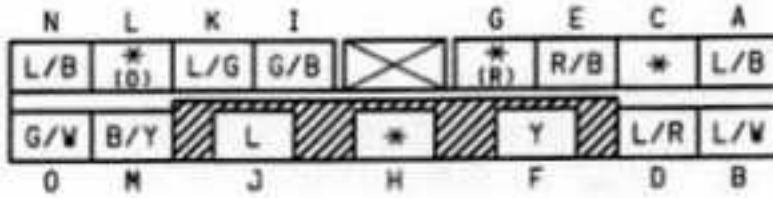


JB-04 – Fuse Box for Front Harness (F) Page 119

 JB-04 FRONT HARNESS (F)

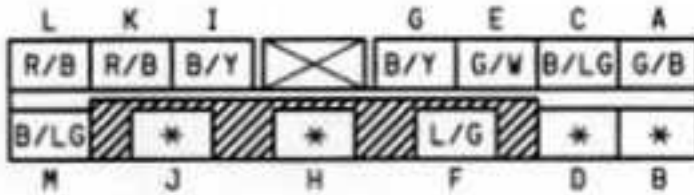

JB-05 – Fuse Box for Dash Harness (D) Page 119

 JB-05 DASH HARNESS (D)

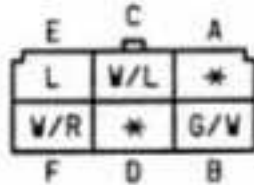


JB-06 – Fuse Box for Front Harness (F) Page 119

JB-06 FRONT HARNESS (F)



JB-07 – Fuse Box for Dash Harness (D) Page 119

 
JB-07 DASH HARNESS (D)

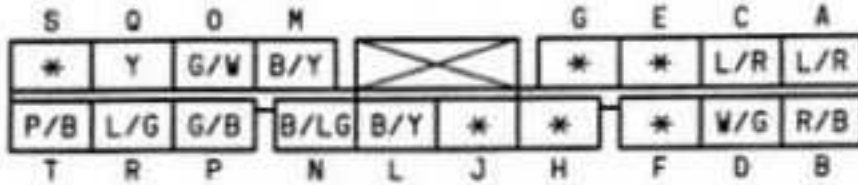

JB-08 – Fuse Box for Dash Harness (D) Page 119


JB-08 DASH HARNESS (D)

 ( ) ...EC-AT  
 ( ) ...WITH REAR WIPER & WASHER




JC-01 – Joint Connector (F) Page 18

 JC-01 JOINT CONNECTOR (F)




JC-02 - Joint Connector (F) Page 18

 JC-02 JOINT CONNECTOR (F)



JC-08 – Joint Connector (D) Page 18

 JC-08 JOINT CONNECTOR (D)



(WITH AUDIO SYSTEM TYPE-2)

 
JC-12 – Joint Connector (R) Page 18

JC-12 JOINT CONNECTOR (R)




JC-13 – Join Connector (R) Page 18

JC-13 JOINT CONNECTOR (R)

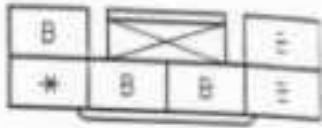


K2-01 – Door Lock Timer Unit (D) Page 96

 K2-01 DOOR LOCK TIMER UNIT (D)




O-01 – ABS Control Unit (R) Page 102

 O-01 ABS CONTROL UNIT (R)




O-02 – Hydraulic Unit (F) Page 102

 O-02 HYDRAULIC UNIT (F)

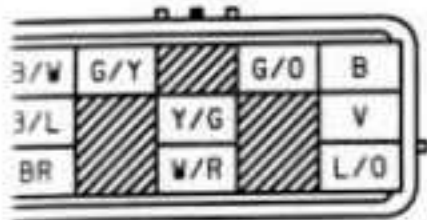


O-03 – Hydraulic Unit (F) Page 102

 O-03 HYDRAULIC UNIT (F)




O-04 – ABS Wheel Speed Sensor LF (F) Page 102

 O-04 ABS WHEEL SPEED SENSOR LF (F)

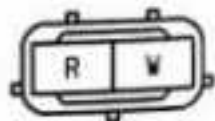


O-05 – ABS Wheel Speed Sensor RF (F) Page 102

 ABS WHEEL SPEED  
SENSOR RF (F)

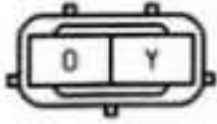


O-06 – ABS Wheel Speed Sensor LR (R) Page 102

 O-06 ABS WHEEL SPEED  
SENSOR LR (R)



O-07 – ABS Wheel Speed Sensor RR (R) Page 102

 O-07 ABS WHEEL SPEED  
SENSOR RR (R)



Q-01 – Cruise Control Unit (D) Page 104

Q-01 CRUISE CONTROL UNIT (D) ( )...EC-AT

S	Q	O	M	K	I	G	E	C	A
L/Y	L/B	R/B	LG/R	BR/R	V/W	L/O (L/W)	G/R	LG/B	GY/R
B	*	*	*	*(P)	G/W	G	BR/Y	L	L/R
T	R	P	N	L	J	H	F	D	B

 
Q-02 – Cruise Control Main Switch/Illumination (I) Page 80, 104

Q-02 CRUISE CONTROL MAIN SWITCH ILLUMINATION (I)



Q-03 – Brake Switch (D) Page 104

Q-03 BRAKE SWITCH (D)




Q-04 - Actuator (F) Page 104

Q-04 ACTUATOR (F)



Q-05 – Cruise Control Switch (D) Page 104

 Q-05 CRUISE CONTROL SWITCH  
(STEERING WHEEL  
SWITCH ASSEMBLY) (D)




S-06 – Connector Between Dash and Air Bag (D) Page 110

S-06 CONNECTOR BETWEEN DASH(D) & AIR BAG(AB)



S-07 – Connector Between Dash and Air Bag (D) Page 110

S-07 CONNECTOR BETWEEN DASH (D) |  
AIR BAG (AB)

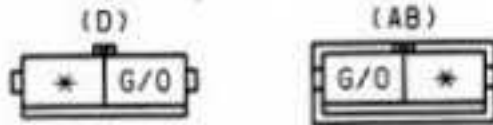 

S-08 – Connector Between Dash and Air Bag (D) Page 110

S-08 CONNECTOR BETWEEN DASH(D) & AIR BAG(AB)



 
 
S-09 – Air Bag Module (D) Page 110

S-09 AIR BAG MODULE (D)




U-01 – Diagnosis Connector (F) Page 112/U

U-01 DIAGNOSIS CONNECTOR (F)

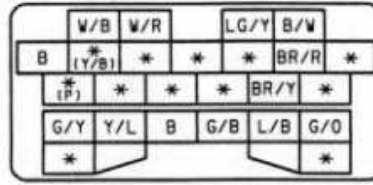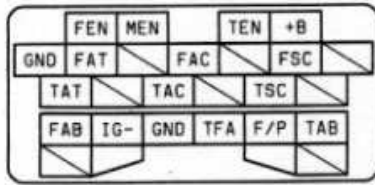


NOTES: THIS IS THE CONNECTOR AS SEEN FROM THE TERMINAL SIDE.  
( )...EC-AT

 X-01 – Main Fuse Block (F) Page 115, 24, 28, 42, 44, 50, 52, 56, 60, 62, 66, 68, 78, 82, 86, 88, 90, 94, 96, 98, 100, 102, 104, 110

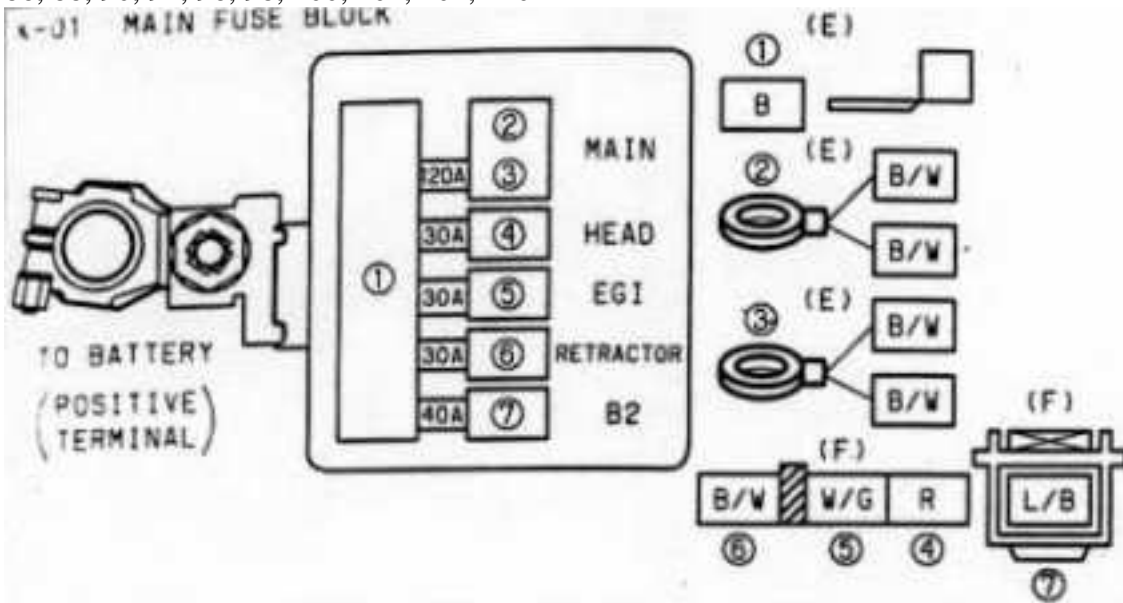


X-02 – Relay Fuse Block (F) Page 115, 24, 28, 42, 44, 50, 52, 60, 62, 66, 68, 78, 82, 86, 88, 90, 94, 96, 98, 100, 102, 104, 110

 X-02 RELAY FUSE BLOCK (F)

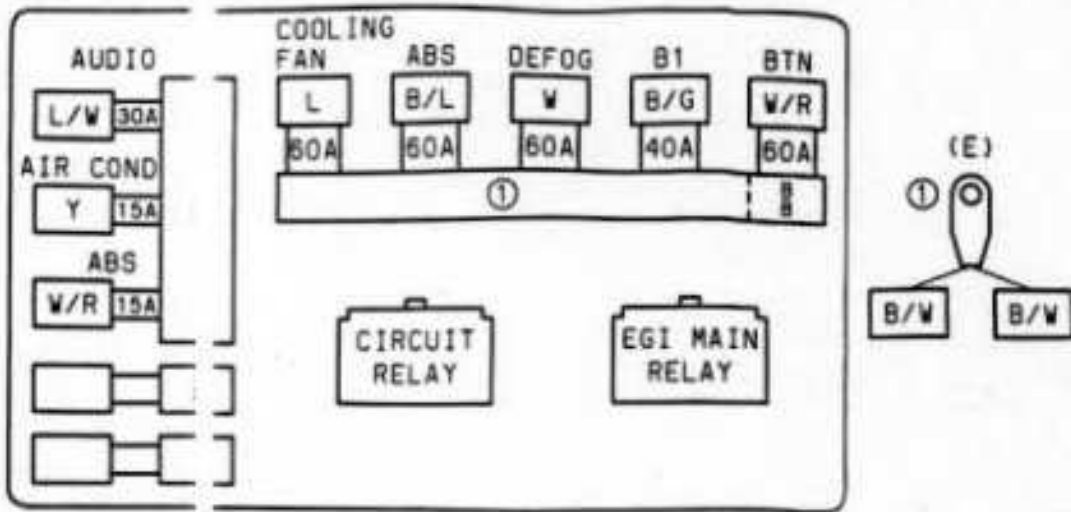


X-03 – Ignition Switch (F) Page 115, 24, 28, 42, 44, 50, 52, 62, 66, 68, 78, 86, 88, 90, 94, 98, 100, 102, 104, 110

 X-03 IGNITION SWITCH (F)

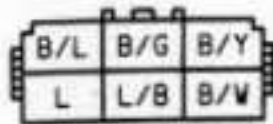


X-04 – Combination Switch (F) Page 115, 50, 52, 56, 62, 82

 X-04 COMBINATION SWITCH (F)

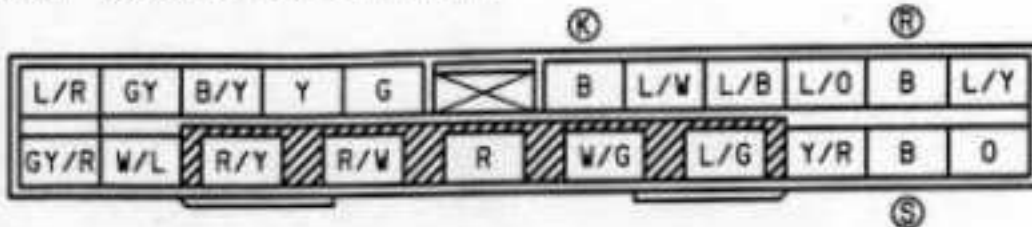

X-05 – Connector Between Front and Emission (F) Page 115, 28, 30, 32, 34, 44

 
X-05 CONNECTOR BETWEEN FRONT (F) & EMISSION (EM)

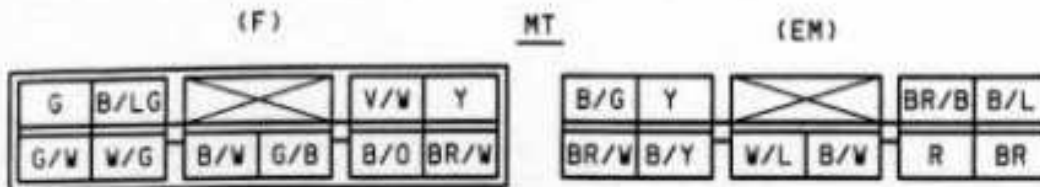

X-06 – Connector Between Front and Instrument (F&I) Page 115, 24, 44, 46, 56, 62, 86




 X-06 CONNECTOR BETWEEN FRONT (F) & INSTRUMENT PANEL (I) ( )...EC-AT, ( )... WITH FRONT FOG LIGHT  
 ( )...CANADA, ( )... CANADA WITHOUT FRONT FOG LIGHT

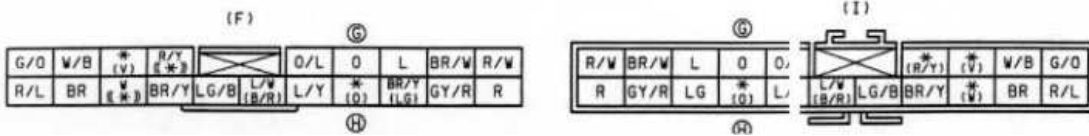


X-07 – Connector Between Front and Dash (F&D) Page 115, 24, 28, 30, 32, 34, 42, 62, 66, 68, 82, 104

 X-07 CONNECTOR BETWEEN FRONT (F) & DASH (D)

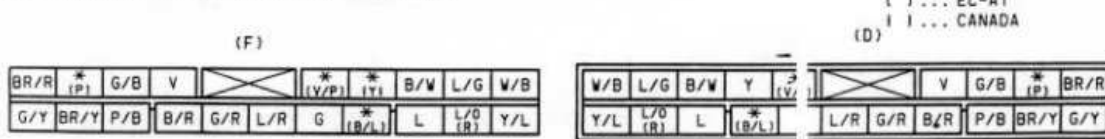


X-08 – Connector Between Front and Dash (F&D) Page 115, 28, 44, 52, 56, 60, 62, 66, 68, 82, 86, 88, 90, 96, 104, 110

 X-08 CONNECTOR BETWEEN FRONT (F) & DASH (D)

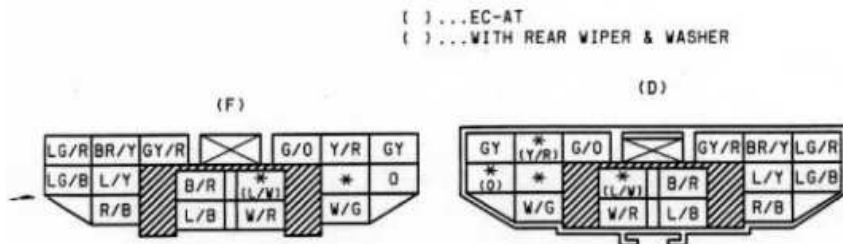


X-09 – Connector Between Front and Air Bag (F) Page 115, 66, 110

 X-09 CONNECTOR BETWEEN FRONT (F) & AIR BAG (AB)

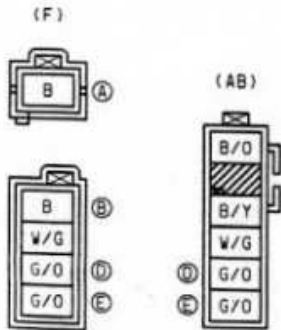


X-10 – Connector Between Front and Rear (F&R) Page 115, 24, 28, 30, 50, 68, 78, 102

 X-10 CONNECTOR BETWEEN FRONT (F) & REAR (R) ( )...WITH HEADLIGHT CLEANER




X-11 – Connector Between Front and Engine (F) Page 115, 24

 X-11 CONNECTOR BETWEEN FRONT (F) & ENGINE (E)

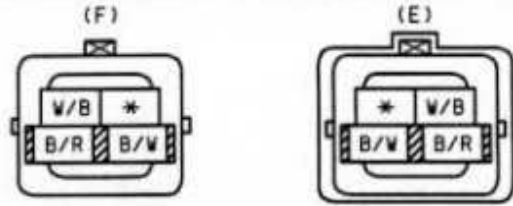


X-12 – Connector Between Front and Engine (F) Page 115, 24, 28, 30, 44, 68

 X-12 CONNECTOR BETWEEN FRONT (F) & ENGINE (E)

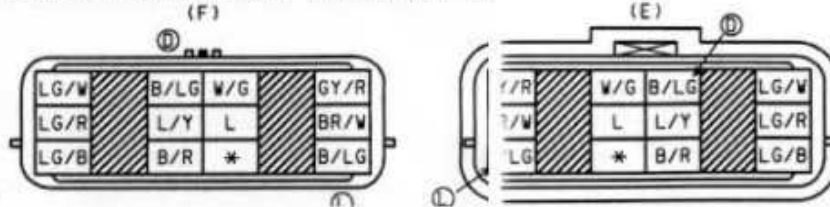


X-13 – Connector Between Front and Floor (F & FR) Page 115, 102

 X-13 CONNECTOR BETWEEN FRONT (F) & FLOOR (FR)

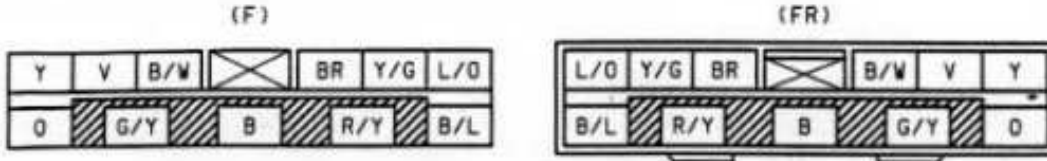


X-14 – Connector Between Emission and Dash (D) Page 115, 30, 32, 34, 42, 44, 66

 X-14 CONNECTOR BETWEEN EMISSION (EM) & DASH (D)

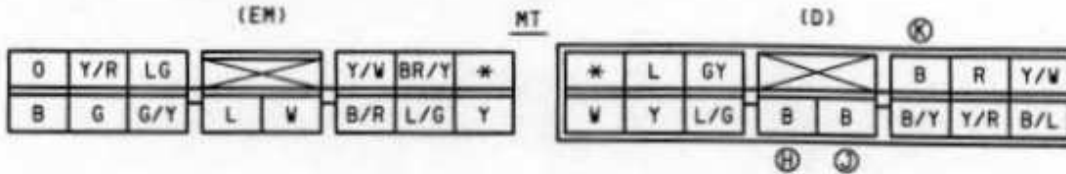


X-15 – Connector Between Instrument and Dash (I&D) Page 115, 44, 46, 46, 68, 86, 110

 X-15 CONNECTOR BETWEEN INSTRUMENT PANEL (I) & DASH (D)

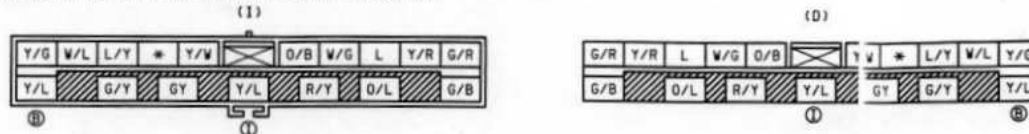


X-16 – Connector Between Instrument and Dash (I&D) Page 115, 46, 86

 X-16 CONNECTOR BETWEEN INSTRUMENT PANEL (I) & DASH (D)

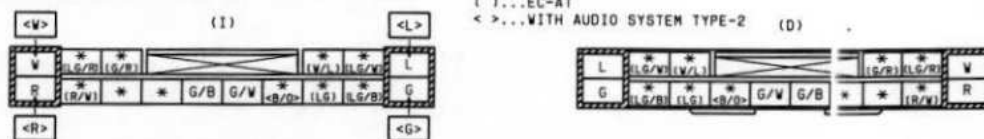

X-17 – Connector Between Instrument and Dash (I&D) Page 115, 44, 46, 62, 68, 86, 88, 90, 104

 X-17 CONNECTOR BETWEEN INSTRUMENT PANEL (I) & DASH (D)

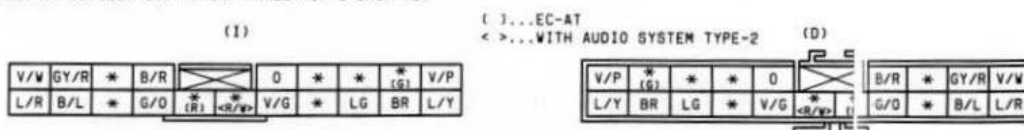

X-18 – Connector Between Instrument and Instrument 2 (I) Page 115, 44, 46, 80

 
X-18 CONNECTOR BETWEEN INSTRUMENT PANEL (I) & INSTRUMENT PANEL NO.2 (I2)



X-19 – Connector Between Dash and Rear (D&R) Page 115, 44, 66, 82, 86, 88, 90, 98


X-19 CONNECTOR BETWEEN DASH (D) & REAR (R)

< >...WITH AUDIO SYSTEM TYPE-2  
( )...WITH HEADLIGHT CLEANER

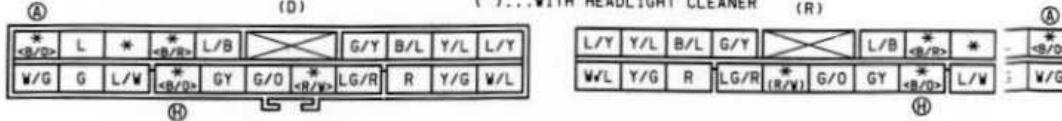

X-20 – Connector between Dash and Door 1 (D) Page 115, 82, 86, 90, 94, 96, 98

 
X-20 CONNECTOR BETWEEN DASH (D) & DOOR NO.1 (DR1)

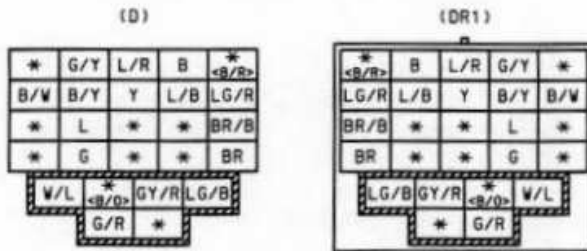

< >...WITH AUDIO SYSTEM TYPE-2

X-21 – Connector Between Dash and Door 2 (D) Page 115, 86, 90, 94, 96, 98

 X-21 CONNECTOR BETWEEN DASH (D) & DOOR NO.2 (DR2)

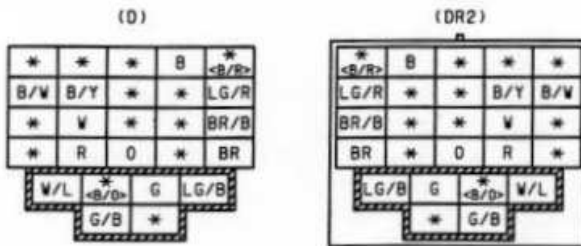

< >...WITH AUDIO SYSTEM TYPE-2

X-22 – Connector Between Rear and Rear 2 (R) Page 115, 52, 78, 82

X-22 CONNECTOR BETWEEN REAR (R) & REAR NO.2 (R2)



( )...WITH REAR WIPER & WASHER

X-23 – Connector Between Rear and Floor (R&FR) Page 30, 82, 102, 115

X-23 CONNECTOR BETWEEN REAR (R) & FLOOR (FR)



< >...WITH AUDIO SYSTEM TYPE-2

X-24 – Connector Between Rear and Fuel Pump (R) Page 28, 44, 115

X-24 CONNECTOR BETWEEN REAR (R) & FUEL PUMP (FP)

