


Installation guide for HalfSpec's 1990-1998 Toyota MR2 Acrylic Clock Filters:

You will need one small flathead screwdriver for the installation of the clock filter.

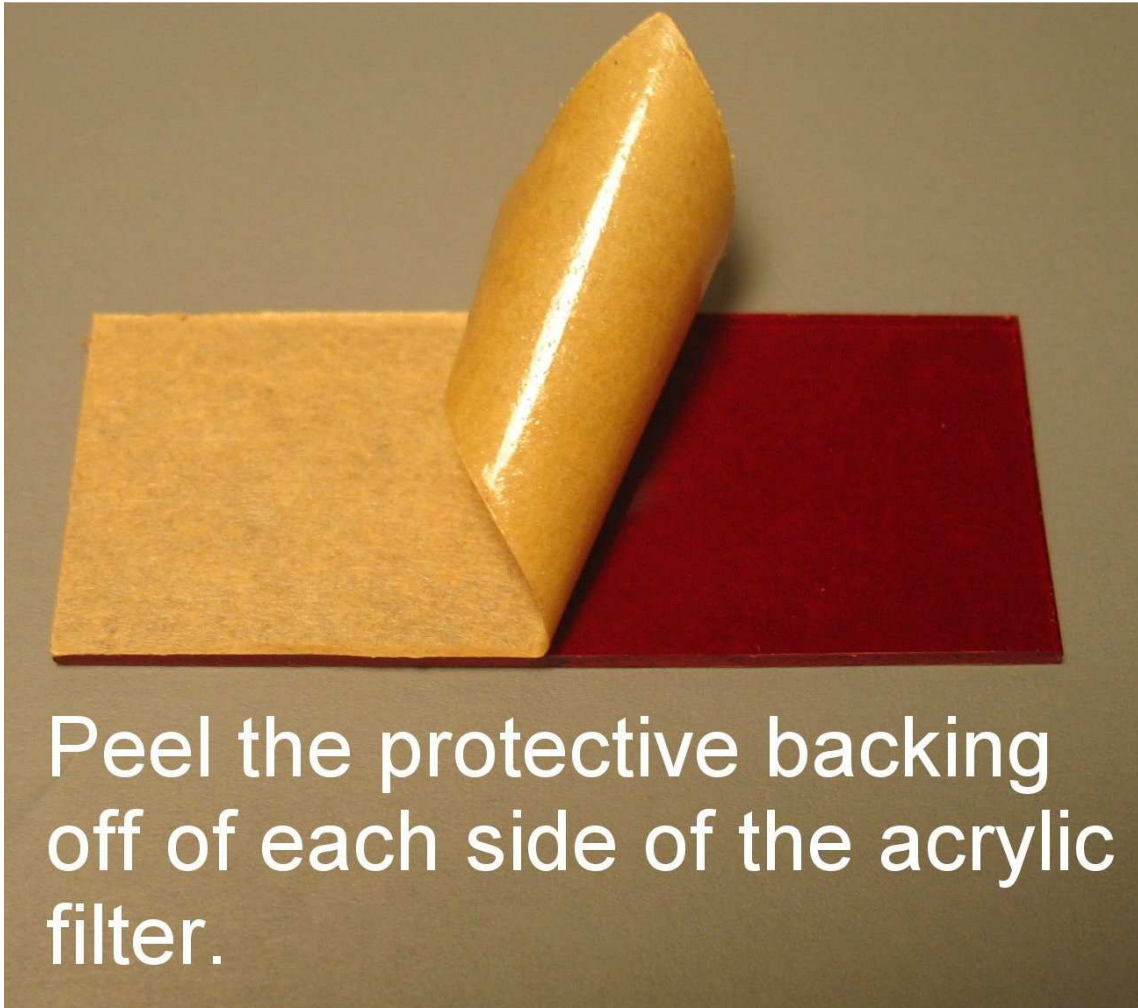



Gently pry off the clock's face plate
with a small flat head screwdriver



OEM Clock
Filter

Your clock will now look like this,
only hopefully cleaner :)





Install your new clock filter in the space where the OEM filter used to fit.



Reinstall the clock's face plate by placing it over the clock and pushing on both sides until it clicks into place.



Thank you for your business.